





## Sizing and Usage Guide

**General Installation:** The unit should be cleaned before installing Algae Guard for the first time. Choose the Algae Guard size you need based on the unit's tonnage. If tonnage is not known, matching Algae Guard's dimensions to cover 1/2 to 2/3 of the coil length will provide cleaning of the entire pan. Remove from packaging; **leave fabric intact**. Place Algae Guard on the surface of the drip pan away from the drainage point. Algae Guard can also be used in refrigeration units and ice machines where placement does not allow drainage into food or food contact surfaces.

### Fan Coil and PTAC Air Conditioning Units

Unit Tonnage	3 Month Protection 1/8" thickness	6 Month Protection 1/4" thickness	Product Dimensions
Up to 3/4		AG4/.75-H	4" x .75"
1	AG4/1.50R	AG4/1.50-H	4" x 1.5"
1-2	AG6/1.50-R	AG6/1.50-H	6" x 1.5"
2-3	AG8/1.50-R	AG8/1.50-H	8" x 1.5"
3-4	AG12/1.50-R	AG12/1.50-H	12" x 1.5"

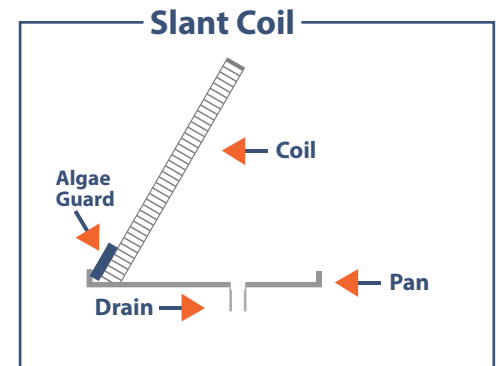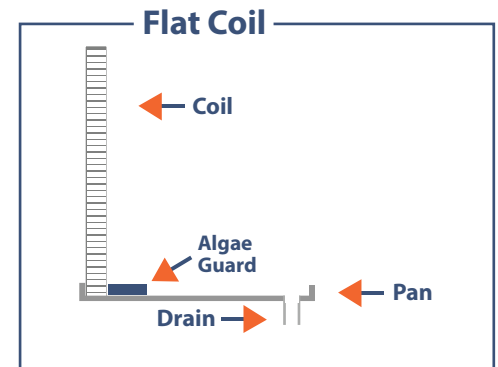

### Large Air Handlers/ Commercial Units

Unit Tonnage	3 Month Protection 3/4" thickness	Product Dimensions
6-12	AG-N2	12" x 1.5"
20-25	AG-N	24" x 1.5"
20-25	AG-S	12" x 3"
40-50	AG-D	24" x 3"

